THE FRONT

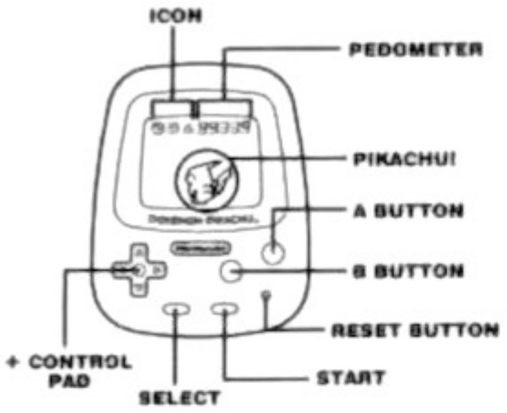

BUTTON	FUNCTION
A BUTTON	Make your selection
B BUTTON	Cancel your selection
START	Option Screen
SELECT	Friend-Status Screen
RESET	Reset to the default settings (Use a pointed object)
+ CONTROL PAD	↑ or ↓ Select an item/change numbers ← or → Select an icon

THE BACK

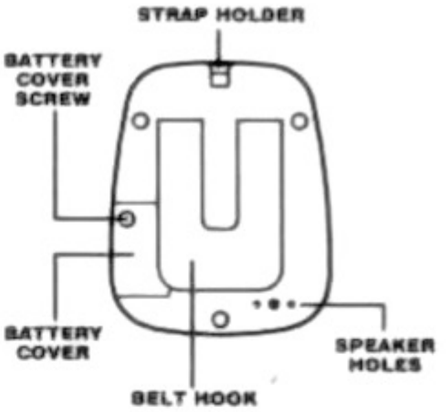

INSTRUCTIONS

GETTING STARTED

Wake Up Sleepy Head!

Pull out the battery tab on the right side of the Pokémon Pikachu™ to wake it up.

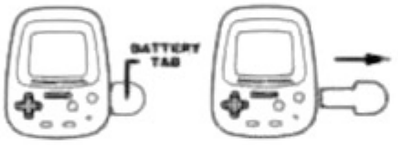

- When the Title Screen appears, press the A Button to view the Time Set Screen.
- Change the "hour" by pressing ↑ or ↓ on the + Control Pad. Press the A Button to set it.
- Follow the same procedure to set the "minutes."
- Next, the Game Screen appears and Pikachu starts to move.

Battery-Save Feature!

Pokémon Pikachu has a battery-saving feature. If you don't use it for a while, your Pokémon Pikachu will shut down to save battery power. While in the battery-saving mode, press the A Button and Pikachu will reappear.

LET'S PLAY!

Step To It!

Attach Pokémon Pikachu to your belt using the belt hook and start walking.

How many steps did you take?

Pokémon Pikachu features a built in meter that counts the number of steps you take. Your steps are converted into electronic Watts. The more steps you take, the more Watts you gain. Give Watts to Pikachu as gifts or use them to play the Mini-Game. It's up to you, but if you want to keep Pikachu happy, you better give it lots of Watts.

THE GAME SCREENS

Select one of the icons in the upper-left side of the Game Screen by pressing ← or → on the + Control Pad. Press the A Button to confirm your selection.

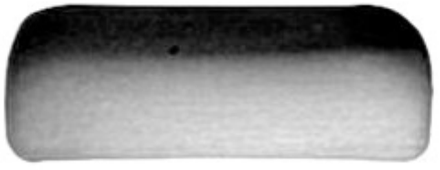

WARNINGS AND PRECAUTIONS!

REPETITIVE STRAIN WARNING

Some people may experience fatigue or discomfort after playing for a long time. Regardless of how you feel, you should ALWAYS take a 10 to 15 minute break every hour while playing. If your hands or arms become tired or uncomfortable while playing, stop and rest. If you continue to experience soreness or discomfort during or after play, listen to the signals your body is giving you. Stop playing and consult a doctor. Failure to do so could result in long term injury. If your hands, wrist or arms have been injured or strained in other activities, use of your Pokémon Pikachu could aggravate the condition. Before playing, consult a doctor.

BATTERY PRECAUTIONS / WARNING

FAILURE TO FOLLOW THE FOLLOWING INSTRUCTIONS MAY CAUSE THE BATTERY TO MAKE "POPPING" SOUNDS AND LEAK BATTERY ACID RESULTING IN PERSONAL INJURY AND DAMAGE TO YOUR POKÉMON PIKACHU. IF BATTERY LEAKAGE OCCURS, THOROUGHLY WASH THE AFFECTED SKIN AND CLOTHES. KEEP BATTERY ACID AWAY FROM YOUR EYES AND MOUTH. CONTACT THE BATTERY MANUFACTURER FOR FURTHER INFORMATION.

1. Only replace the battery with another battery of the same type (CR2032).
2. When replacing the battery, keep the battery cover, screw and battery away from small children. If swallowed, immediately see a doctor and call Poison Control.
3. Do not put the battery in backwards (positive (+) and negative (-) ends must face the proper direction).
4. Do not leave a used battery in the Pokémon Pikachu. When the battery is losing its charge, the game sounds may become weak and the display screen will dim. When this happens, promptly replace the battery with a new one.
5. Do not leave the battery in the Pokémon Pikachu for long periods of non-use.
6. Do not dispose of the battery in a fire or expose to water.

The Alarm Screen

Need to get up for school? Set the alarm!

- Choose the Clock icon to display the time.
- Press the A Button to view the cursor.
- Press the A Button again to turn the alarm on/off.
- Press ♣ on the ✣ Control Pad, then press the A Button.
- Change the alarm "hour" by pressing ♦ or ♣ on the ✣ Control Pad, then press the A Button to set it.
- Follow the same procedure to set the "minutes."
- Press the B Button to return to Pikachu.

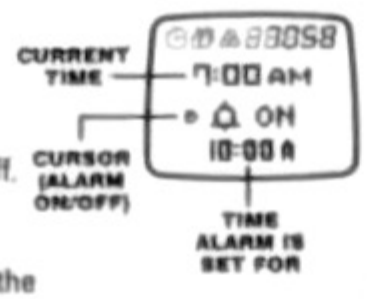

The Gift Screen

It's better to give than to receive.
Give Pikachu gifts to make it happy!

- Choose the Gift icon to view your Watts.
- Choose how many Watts you want to give by pressing ♦ or ♣ on the ✣ Control Pad. Press the A Button to change the amount for the hundreds, tens and then the ones. Press the A Button again to give them to Pikachu.

(Press the B Button to reset the amount.)

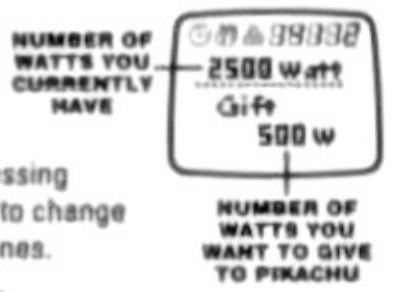

The Mini-Game Screen

Do you feel lucky?

- Select the Coins icon to play the Mini-Game.
- Press the A Button to spin the slots.
- Press the A Button to stop the slots one at a time.
- If three of the same pictures appear, you win lots of Watts.
- Press the B Button to return to Pikachu.

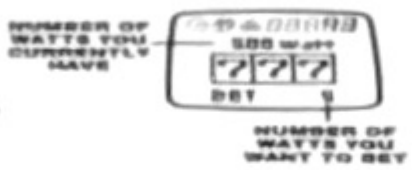

Friend-Status Screen

- Press SELECT to view the Friend-Status screen. This screen, pictured to the right, shows you how well you and Pikachu are getting along.
- Press the B Button to return to Pikachu.

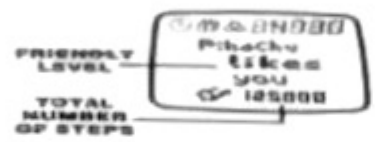

OPTION SCREEN

Press START to view the Option Screen. This screen, pictured to the right, allows you to change the settings of your Pokémon Pikachu. Press ♦ or ♣ on the ✣ Control Pad to move the cursor in front of the setting you wish to change, then press the A Button.

Reset

- The pedometer that appears in the upper-right corner of the screen will be reset to zero. Now you can count how many steps it takes you to get to school. Press the B Button to return to Pikachu.

Sound

- The sound can be set On or Off by pressing the A Button. Press the B Button to exit, then press the B Button again to return to Pikachu.

Time Set

- The time appears on the screen. Change the "hour" by pressing ♦ or ♣ on the ✣ Control Pad. Press the A Button to set it. Follow the same procedure to set the "minutes." Press the B Button to return to Pikachu.

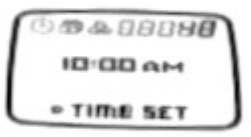

TIME SET SCREEN

EXAMPLES OF WHAT PIKACHU WILL DO

Watch Pikachu perform a variety of actions. For example:

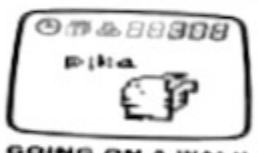

GOING ON A WALK...
When you bring Pokémon Pikachu with you on a walk, Pikachu will walk too!

BRUSHING TEETH...
Pikachu is very clean. Are you clean too?

TAKING A BATH...
Pikachu also takes baths. Looks happy, huh?

Pikachu will show you a number of other cute gestures. How many of them will you see? Look for them!

REMOVING THE BATTERY

Please replace the battery when the screen display becomes weak.

- Loosen the black phillips head screw, remove the battery cover and the battery.
- Insert a new lithium battery (CR2032) with the + side facing up.
- Replace the cover and screw.

Note: When the battery dies, Pokémon Pikachu's saved data is lost.

HARDWARE PRECAUTIONS / MAINTENANCE

1. Do not disassemble or try to repair the Pokémon Pikachu. Doing so voids your warranty.
2. Do not store the Pokémon Pikachu in a humid place, on the floor or in any location where it may collect dirt, dust, lint, etc.
3. Do not drop, hit or otherwise abuse the Pokémon Pikachu.
4. Do not expose the Pokémon Pikachu to extreme heat or cold. The liquid crystal display (LCD) may become slower or may not work when the temperature is low. The LCD will deteriorate at a high temperature. Take care not to expose the Pokémon Pikachu to direct sunlight for extended periods of time.
5. The LCD may be damaged by sharp objects or pressure. Take great care to protect the display from scratches or stains.
6. Do not spill liquids on the Pokémon Pikachu. To clean, use a soft slightly damp cloth. Allow the Pokémon Pikachu to dry completely before using again. (Use water only.)
7. For the best game image, look directly at the Pokémon Pikachu display from the front and operate only in a good light.

FCC INFORMATION

COMPLIANCE WITH FCC REGULATIONS

Under FCC rules, changes or modifications to this product not expressly approved by the manufacturer could void the user's authority to operate this product. This product has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Move the Pokémon Pikachu away from the receiver
- Consult the dealer, an experienced radio/TV technician or a NINTENDO AUTHORIZED REPAIR CENTER℠ for help or suggestions.

The user may find the following booklet prepared by the Federal Communications Commission helpful: How to Identify and Resolve Radio-TV Interference Problems. This booklet is available from the U.S. Government Printing Office, Washington, D.C., 20402, Stock No. 004-000-00345-4.

WARRANTY AND SERVICE INFORMATION

You may need only simple instructions to correct a problem with your product. Call the Consumer Assistance Hotline at 1-800-255-3700 rather than going to your retailer. Hours of operation are 6 a.m. to 9 p.m., Pacific Time, Monday - Saturday, and 6 a.m. to 7 p.m., Pacific Time, on Sundays (times subject to change). If the problem cannot be solved over the telephone, you will be offered express factory service through Nintendo or referred to the nearest NINTENDO AUTHORIZED REPAIR CENTER. Please do not send any products to Nintendo without calling us first.

WARRANTY

Nintendo warrants to the original purchaser that the product shall be free from defects in material and workmanship for a period of three (3) months from the date of purchase. If a defect covered by this warranty occurs during this three (3) month warranty period, Nintendo or a NINTENDO AUTHORIZED REPAIR CENTER will repair the defective product, free of charge.

SERVICE AFTER EXPIRATION OF WARRANTY

Please call the Consumer Assistance Hotline at 1-800-255-3700 for troubleshooting assistance and/or referral to the nearest NINTENDO AUTHORIZED REPAIR CENTER. In some instances, it may be necessary for you to ship the complete product, FREIGHT PREPAID AND INSURED FOR LOSS OR DAMAGE, to the nearest service location. Please do not send any products to Nintendo without calling us first.

WARRANTY LIMITATIONS

THIS WARRANTY SHALL NOT APPLY IF THIS PRODUCT: (a) IS USED WITH PRODUCTS NOT SOLD OR LICENSED BY NINTENDO (INCLUDING, BUT NOT LIMITED TO, NON-LICENSED GAME ENHANCEMENT AND COPIER DEVICES, ADAPTERS, AND POWER SUPPLIES); (b) IS USED FOR COMMERCIAL PURPOSES (INCLUDING RENTAL); (c) IS MODIFIED OR TAMPERED WITH; (d) IS DAMAGED BY NEGLIGENCE, ACCIDENT, UNREASONABLE USE, OR BY OTHER CAUSES UNRELATED TO DEFECTIVE MATERIALS OR WORKMANSHIP; OR (e) HAS HAD THE SERIAL NUMBER ALTERED, DEFACED OR REMOVED.

ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING **WARRANTIES OF MERCHANTABILITY** AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED IN DURATION TO THE 3 MONTH WARRANTY PERIOD DESCRIBED ABOVE. IN NO EVENT SHALL NINTENDO BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY IMPLIED OR EXPRESS WARRANTIES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSION OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Nintendo's address is as set forth on the other side of this card.

This warranty is only valid in the United States. REV-K-P

REPLACEMENT PARTS

To order a replacement battery cover, battery, screw or other Nintendo parts, please call the Consumer Assistance Hotline at 1-800-255-3700.

Nintendo®
AUTHORIZED REPAIR CENTERS™
1-800-255-3700